# Honeywell Home Actuators



# **MT4/MT8**

# Small linear thermoelectric Actuators

# **APPLICATION**

Small linear actuators are used in room and zone applications for time-controlled two-point and pulse-width modulated (PWM\*) regulation of heating and cooling systems such as fan coil units, radiators, floor heating systems, chilled ceilings, and convectors.

- Fit on standard M30 x 1.5 heating/cooling valves, thermostatic radiator valves, and valve inserts for manifolds and compact radiators
- Fit to standard closing dimensions (11.5 mm ± 0.3 mm)
- Special valve adapters on request

#### **APPROVALS**

- CE
- UKCA

### **SPECIAL FEATURES**

- No mounting tools required (easily mounted using valve adapter)
- Water-protected housing design in all mounting positions
- Pluggable cable for easy installation and servicing
- Auxiliary switch models for driving pumps or fans
- Normally-open and normally-closed models
- Compact design allows installation in limited space
- Visual indicator showing valve position and type of action (NO or NC)
- Noiseless operation
- Reliable long-term operation
- Overload protection (4 kV) for 230 V models





### **TECHNICAL DATA**

0				
Operating temperatures				
Max. medium	120 °C			
temperature:				
Specifications				
Maximum stroke:	MT4: 4 mm			
	MT8: 8 mm			
Power supply:	MTx-024: 24 V AC/DC ± 20 %			
	MTx-230: 230 V AC +10 %15 %			
Stem force:	90 N			
Open/closing time:	dependent on ambient			
	temperature (see section			
	"Electrical specifications")			
Protection standard:	IP44 in all mounting positions			
Cable length:	1 m, other cable lengths upon			
	request			
Cable wires:	MTx-xxx: 2 x 0.5 mm <sup>2</sup>			
	MTx-xxxS: 4 x 0.35 mm <sup>2</sup>			
Max. permissible	MTx-xxxS: 5 (3) A			
auxiliary switch				
current:				
End position:	MT4: 14.0 mm			
	MT8: 18.0 mm			

<sup>\*</sup>Recommended controllers: Excel 10 and Excel 12 controllers (use with other, non-Honeywell Home controllers may adversely influence PWM-operation).

# **METHOD OF OPERATION**

When the operating current is applied, a PTC resistor heats up a wax element. After a delay, this wax element expands, causing stroke movement.

#### TRANSPORTATION AND STORAGE

Keep parts in their original packaging and unpack them shortly before use.


The following parameters apply during transportation and storage:

Parameter	Value
Environment:	clean, dry and dust free
Min. ambient temperature:	20 °C
Max. ambient temperature:	50 °C
Max. ambient relative	95 % *
humidity:	


<sup>\*</sup>non condensing

# **INSTALLATION GUIDELINES**

# Mounting and dismounting

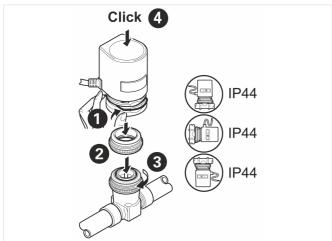


Note: Connection leads must not touch piping (heat transfer).

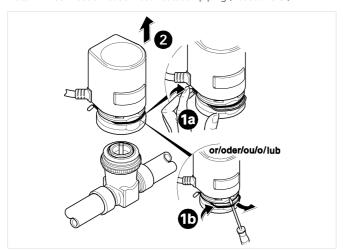


#### **Position Indicator**


The position indicator (the red indicator behind the window on the face of the actuator) shows the model's type of action (NO or NC) as well as the current stroke position.

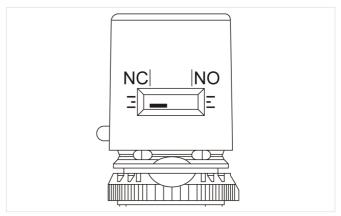

#### Wiring

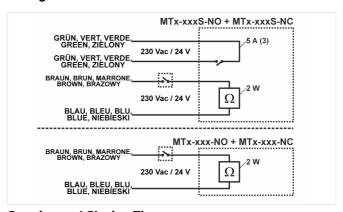

# **Opening and Closing Time**

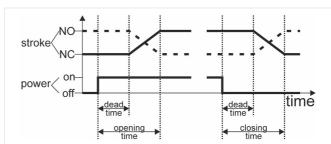

Note: Opening and closing times depend upon ambient temperature and model.


# **TECHNICAL CHARACTERISTICS**

#### **Electrical specifications**

	Initial	Permanent	Power	Ø Runtime for full nominal valve stroke*		
ı	current*	current*	consumption*	(valve stroke: 2.5 mm) (valve stroke: 6.5 mm)	OSNo.	
	~0.2 A**	< 0.1 A	< 2 VA	4.0 min	6.0 min	MTx-024-xx, MTx-024S-xx
	~0.4 A**	< 0.01 A	< 2 VA	4.0 min	6.5 min	MTx-230-xx, MTx-230S-xx

<sup>\*</sup> All values at nominal voltage 24 V AC/DC, 230 V AC, 50 Hz.

#### Valve Action with "Typical" Valves

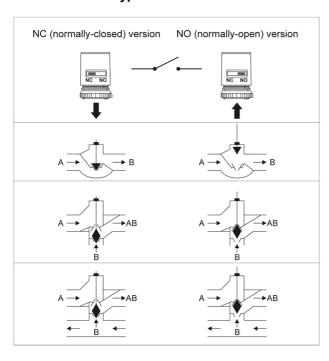


Normally open: 2-way valve, A-B open without power; Normally closed: 2-way valve, A-B shut without power;

Note:


This figure is a schematic diagram showing typical valve action. Actual function can vary depending upon the individual type of valve.

#### **Valve Action with VSxx Valves**

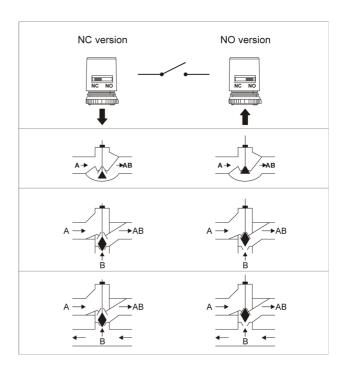

<sup>\*\*</sup>Average during first 500 m sec.

# **DIMENSIONS**

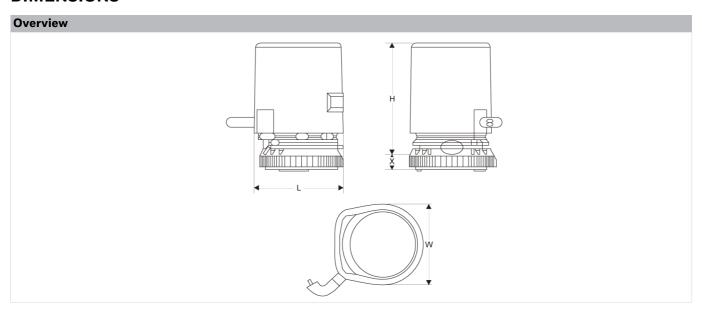

Parameter		MT4-xxx	MT8-xxx
Dimensions:	Н	59	67
	L	45	45
	W	42	42
	X	6	6

Note: All dimensions in mm unless stated otherwise.

# **ORDERING INFORMATION**

The following tables contain all the information you need to make an order of an item of your choice. When ordering, please always state the type, the ordering or the part number.

# **Options**

Action*	Additional features	Voltage	Max. stroke	OSNo.
Normally closed	mally closed		MT4-024-NC	
Normally open				MT4-024-NO
Normally closed	2.5 m cable length	24 V AC/DC		MT4-024-NC-2.5M
Normally open	2.5 m cable length	24 V AC/ DC		MT4-024-NO-2.5M
Normally closed	with auxiliary switch			MT4-024S-NC
Normally open	with auxiliary switch		4 mm	MT4-024S-NO
Normally closed			4 111111	MT4-230-NC
Normally open				MT4-230-NO
Normally closed	2.5 m cable length	230 V AC/DC		MT4-230-NC-2.5M
Normally open	2.5 m cable length	230 V AC/DC		MT4-230-NO-2.5M
Normally closed	with auxiliary switch			MT4-230S-NC
Normally open	with auxiliary switch			MT4-230S-NO
Normally closed		24 V AC/DC		MT8-024-NC
Normally open				MT8-024-NO
Normally closed	2.5 m cable length			MT8-024-NC-2.5M
Normally open	2.5 m cable length			MT8-024-NO-2.5M
Normally closed	with auxiliary switch			MT8-024S-NC
Normally open	with auxiliary switch		8 mm	MT8-024S-NO
Normally closed		230 V AC/DC		MT8-230-NC
Normally open				MT8-230-NO
Normally closed	2.5 m cable length			MT8-230-NC-2.5M
Normally open	2.5 m cable length			MT8-230-NO-2.5M
Normally closed	with auxiliary switch			MT8-230S-NC
Normally open	with auxiliary switch			MT8-230S-NO

 $<sup>{}^{\</sup>star} \text{Without power, in combination with standard 2-way valve; "normally closed"} = \text{stem extends, "normally open"} = \text{stem retracts}$ 

#### **Accessories**

	Description		Dimension	Part No.	
	MT-CLIP	Mounting Clip			
333		10 units		MT-CLIP	
	MT-ADAPT-HW	Mounting adapter			
With the second		10 units	M30 x 1.5	MT-ADAPT-HW	
	MT-ADAPT-HP	Mounting adapter for Herz/Polytherm v	alves		
		10 units		MT-ADAPT-HP	
	MT-CABLE	Cable (only for actuators without auxiliary switch)			
		Suitable for MT4-024/-230 and		MT-CABLE-1.5M	
		MT8-024/-230, 10 units		MT-CABLE-2.5M	
10.11				MT-CABLE-5M	
				MT-CABLE-10M	
	<b>EVA1-DANFOSS</b>	Danfoss adapter set			
		RA/RAV/RAVL, 10 units	M30 x 1.5	EVA1-DANFOSS	
	HCA1VEL	Mounting adapter for Velta compact manifold			
				HCA1VEL	
	R453HY002	Mounting adapter for Giacomini manifo	ld		
				R453HY002	

#### For more information

homecomfort.resideo.com/europe



Ademco 1 GmbH Hardhofweg 40 74821 MOSBACH GERMANY

Phone: +49 6261 810 Fax: +49 6261 81309 Manufactured for and on behalf of the Pittway Sàrl, La Pièce 4, 1180 Rolle, Switzerland by its Authorised Representative Ademco 1 GmbH ENOH-0490GE25 R0421

Subject to change

© 2021 Pittway Sàrl. All rights reserved.
This document contains proprietary information of Pittway Sàrl and its affiliated companies and is protected by copyright and other international laws. Reproduction or improper use without specific written authorisation of Pittway Sàrl is strictly forbidden. The Honeywell Home trademark is used under license from Honeywell International Inc.

